





- A 2-way air valve
- B Fixed top strap
- © LED panel
- **D** Built-in USB port
- © Solar panel
- Adjustable base strap
- © Battery level indicator
- (H) Power button
- Battery level indicator button

To charge your device from the light, simply insert your charging cable at the USB-A end into the USB port on the light, and then plug the other end of the cable into your phone. Power up!

Charge via solar

- Place unit with solar panel side in DIRECT sunlight.
- · Charge unit for 14 hours in direct sunlight for full charge.
- Press battery level indicator button (*) to check battery level. Unit is fully charged when all 4 lights appear.

Charge via USB

- Insert the USB cord provided into the USB port on the base panel.
- Ensure the cord is firmly in position and check that the Battery Level Indicator lights are flashing - this means that the light is charging.
- Quick-charge unit for 2-3 hours for full charge.

Inflate

- · Pinch the valve to open airway.
- With the valve pinched pull unit apart to pre-inflate before blowing.
- · Blow into the valve until fully inflated.
- Firmly close valve tab and push valve into the unit.

Shine

- Press power button (₺) to turn unit on.
 - 1 click = Low
 - 2 click = Medium
 - 3 clicks = High
 - 4 clicks = Flashing
 - 5 clicks = Off
- Or hold for 2 seconds at any time to turn off.

Deflate

- Open tab, squeeze the valve and push to release the air from the unit.
- Close tab on valve when fully deflated.
- Gently twist the light as you deflate for a flatter, more compact shape.